





Canopy - 4mm Bals

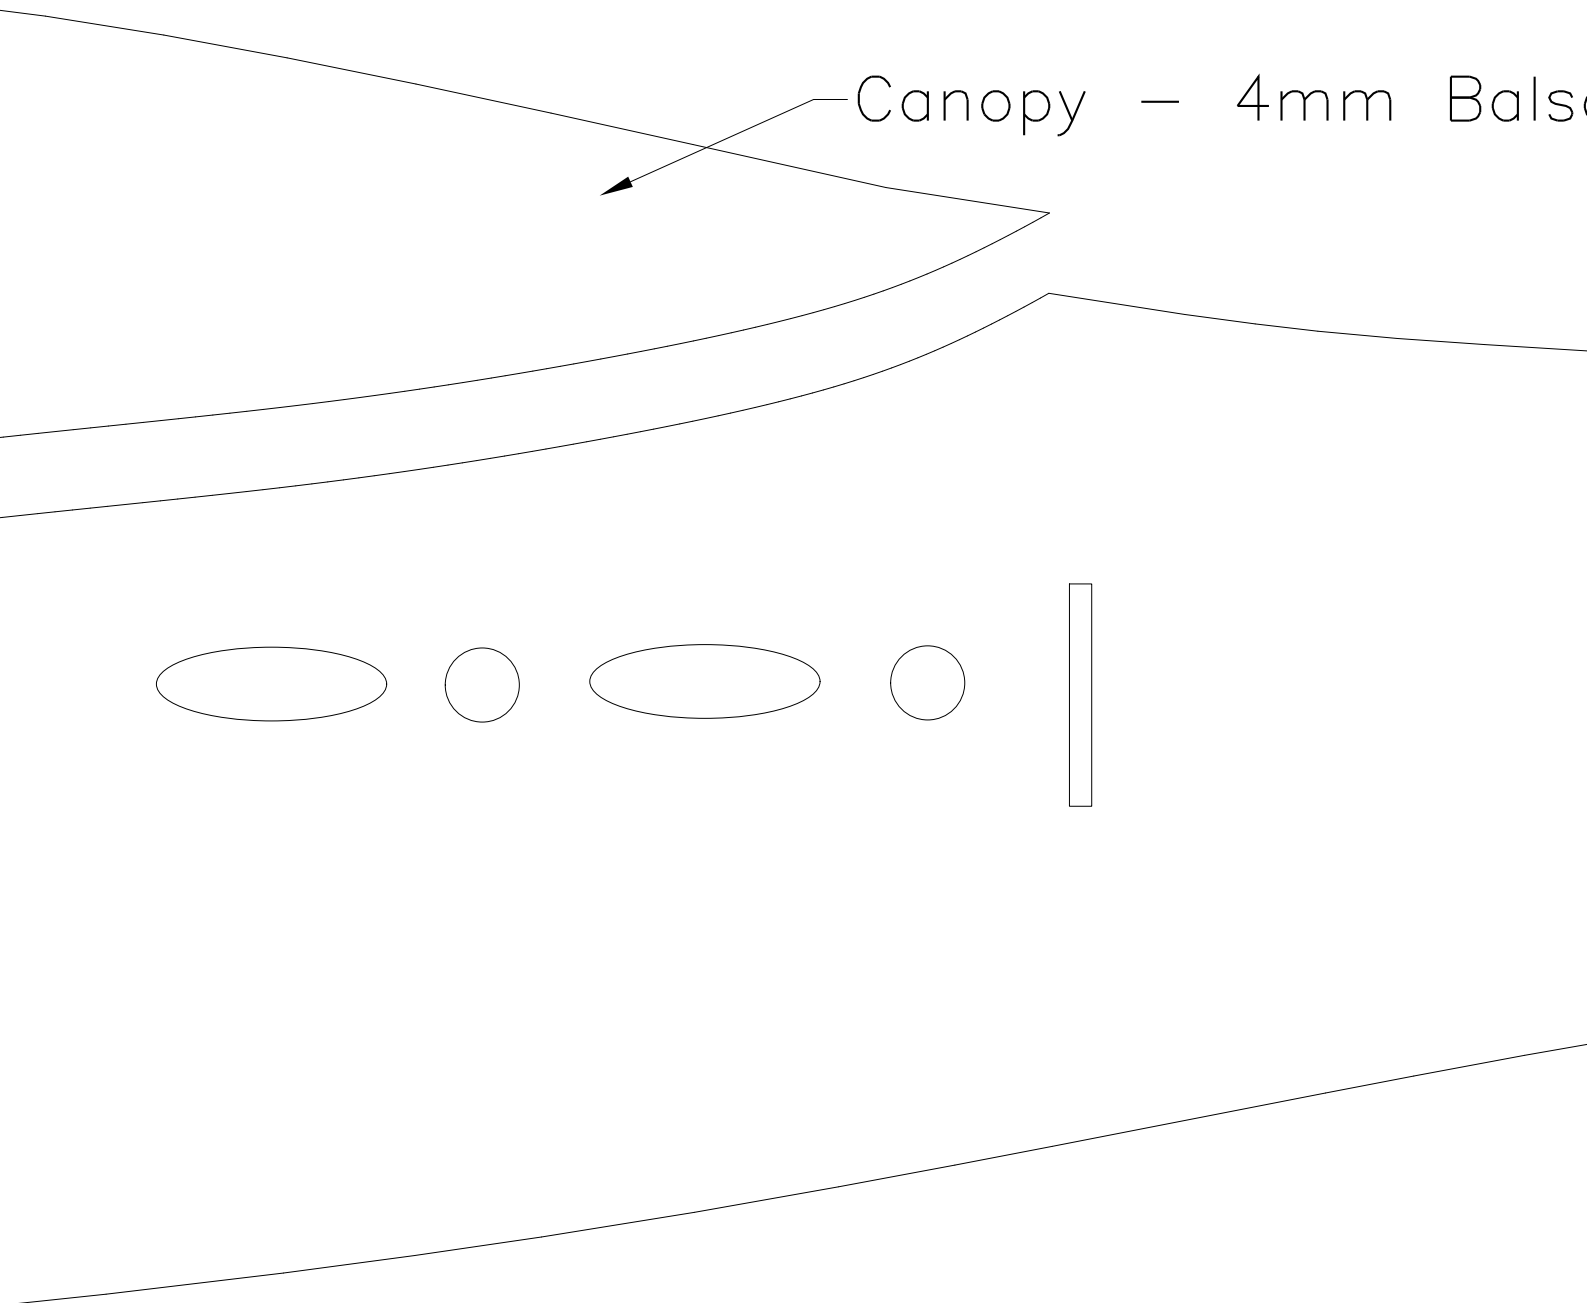

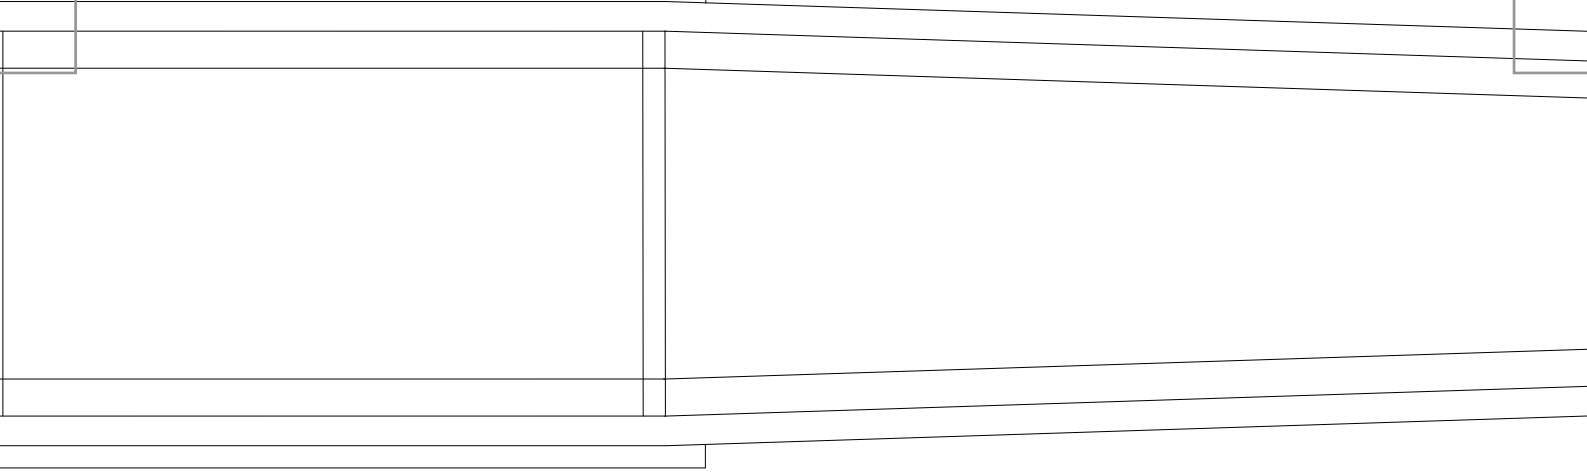

Balsa

Fuselage —

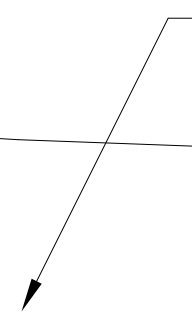


— 4mm Balsa





T2



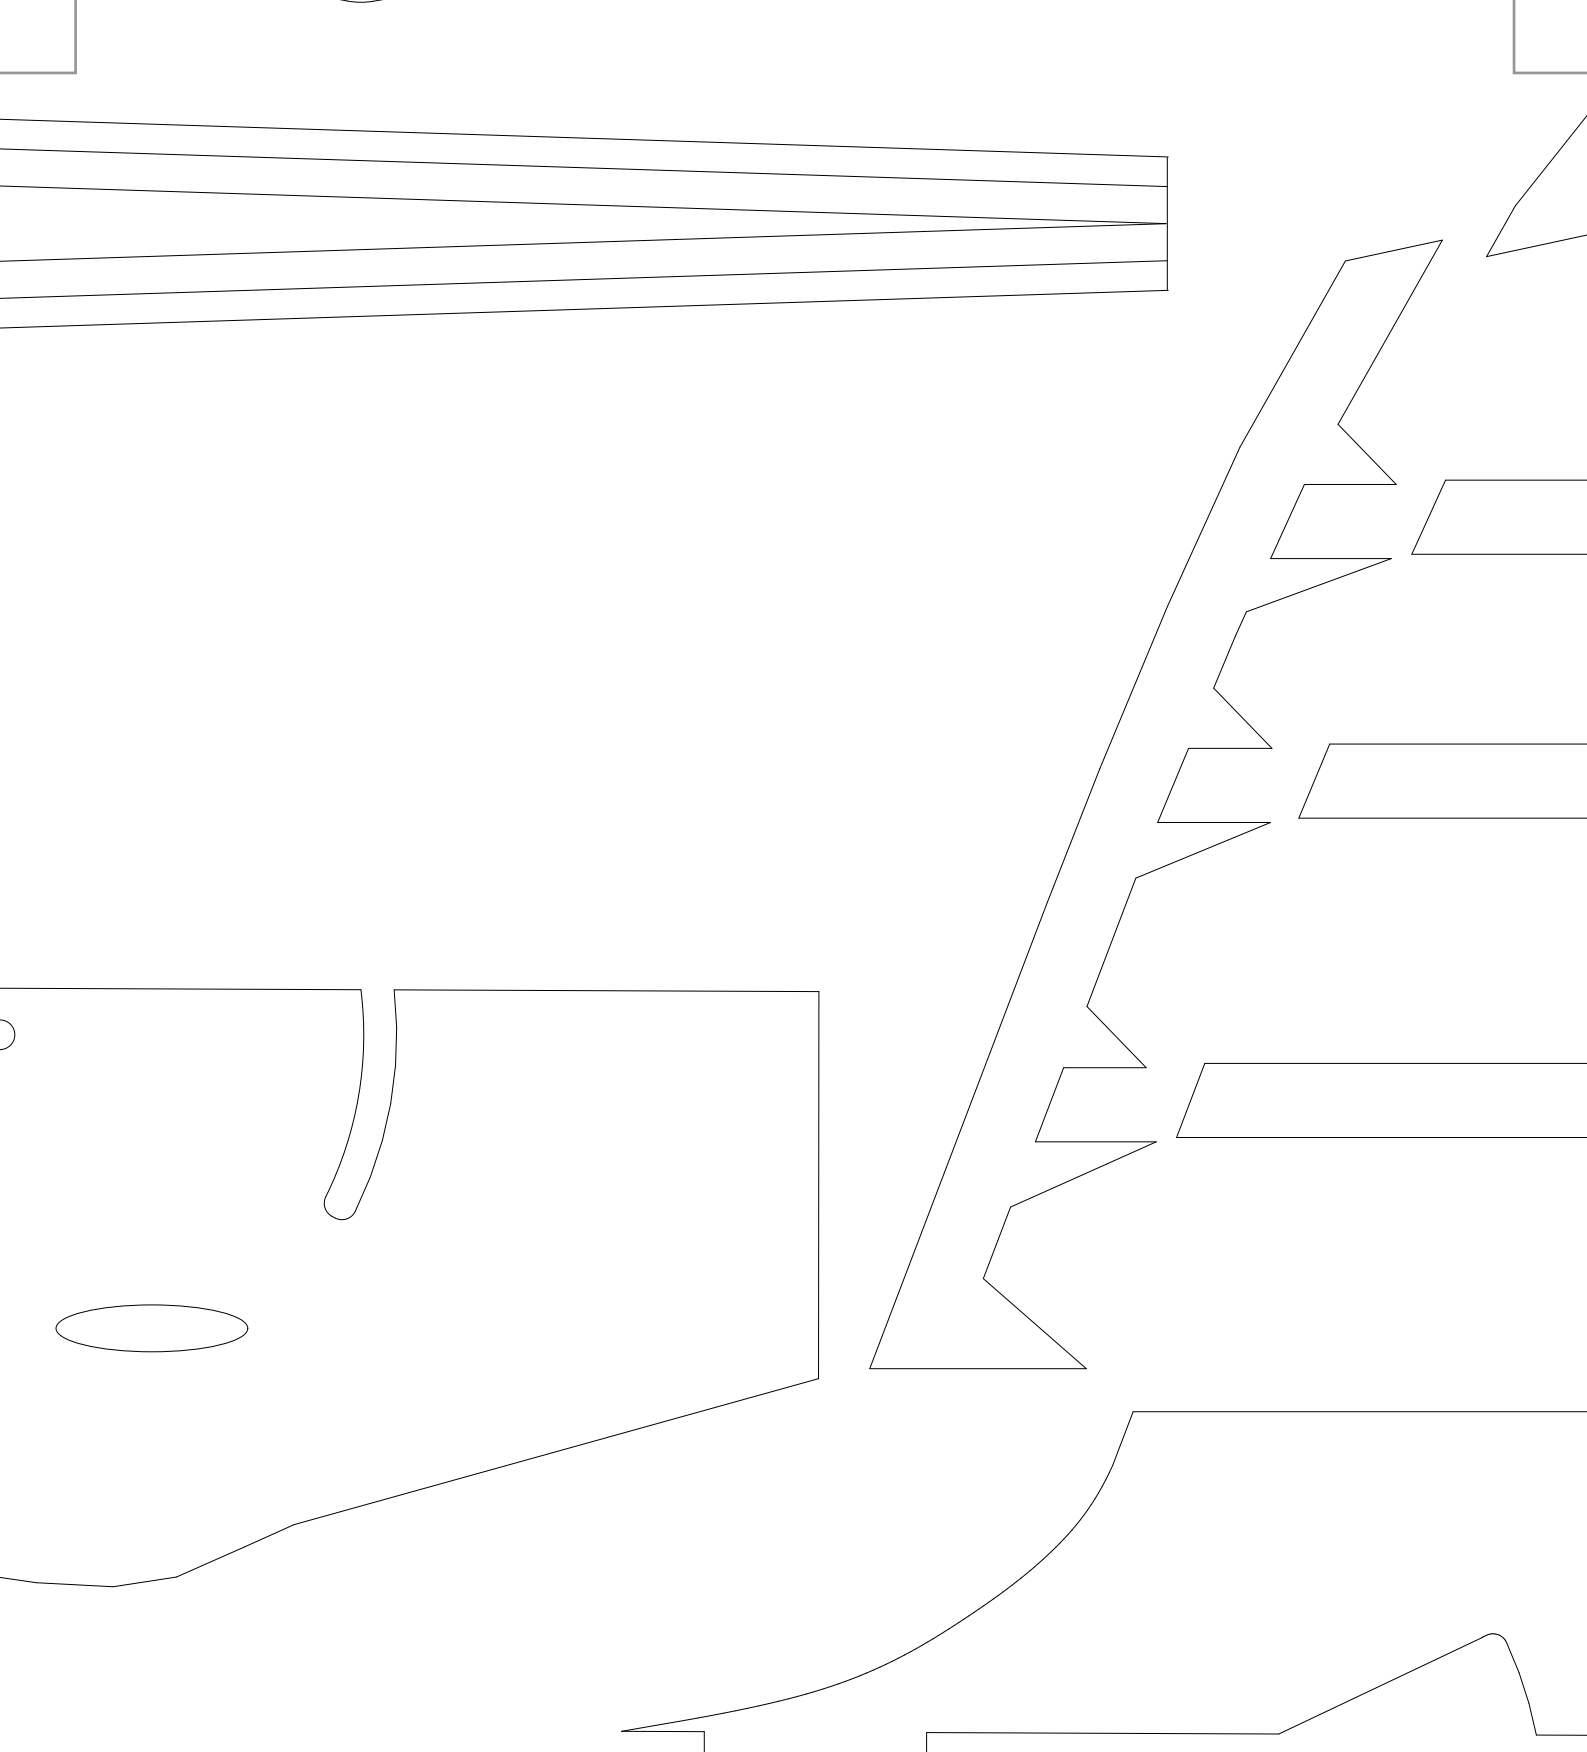


Rudder – All parts in 5m

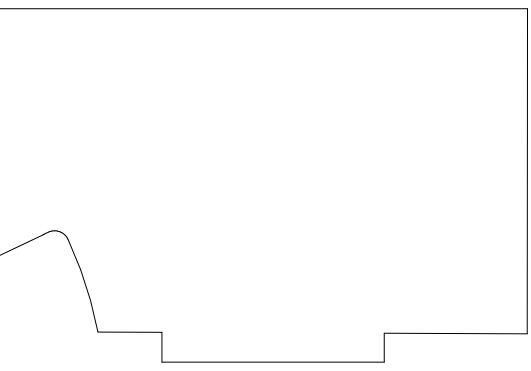
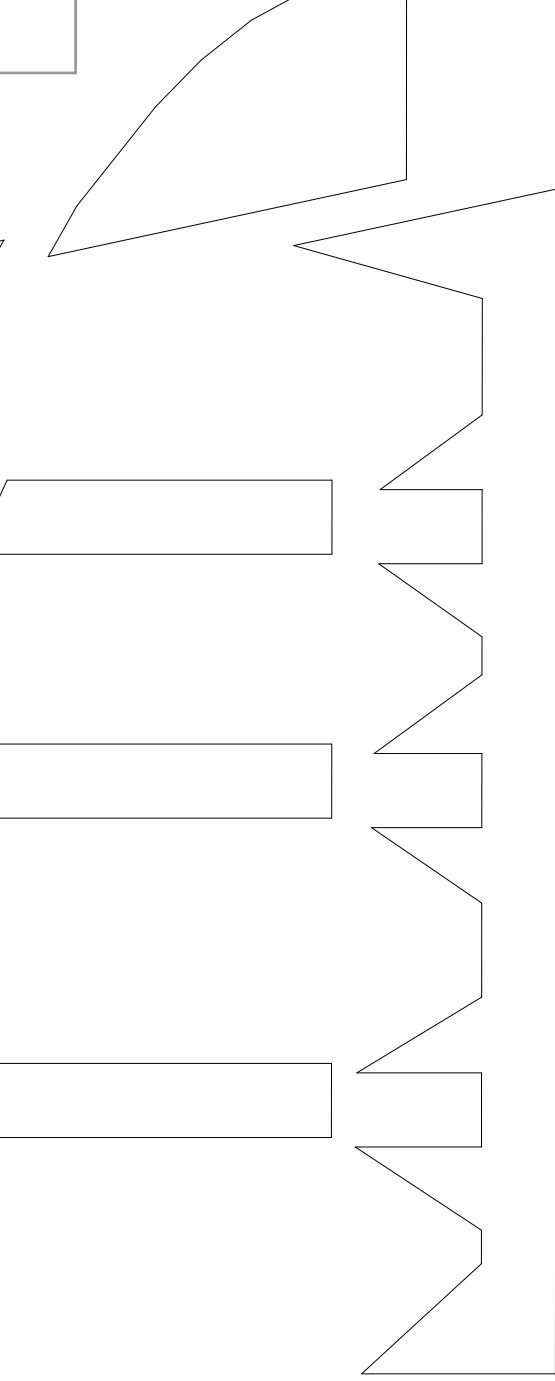


5mm Balsa


Balsa Block

C1

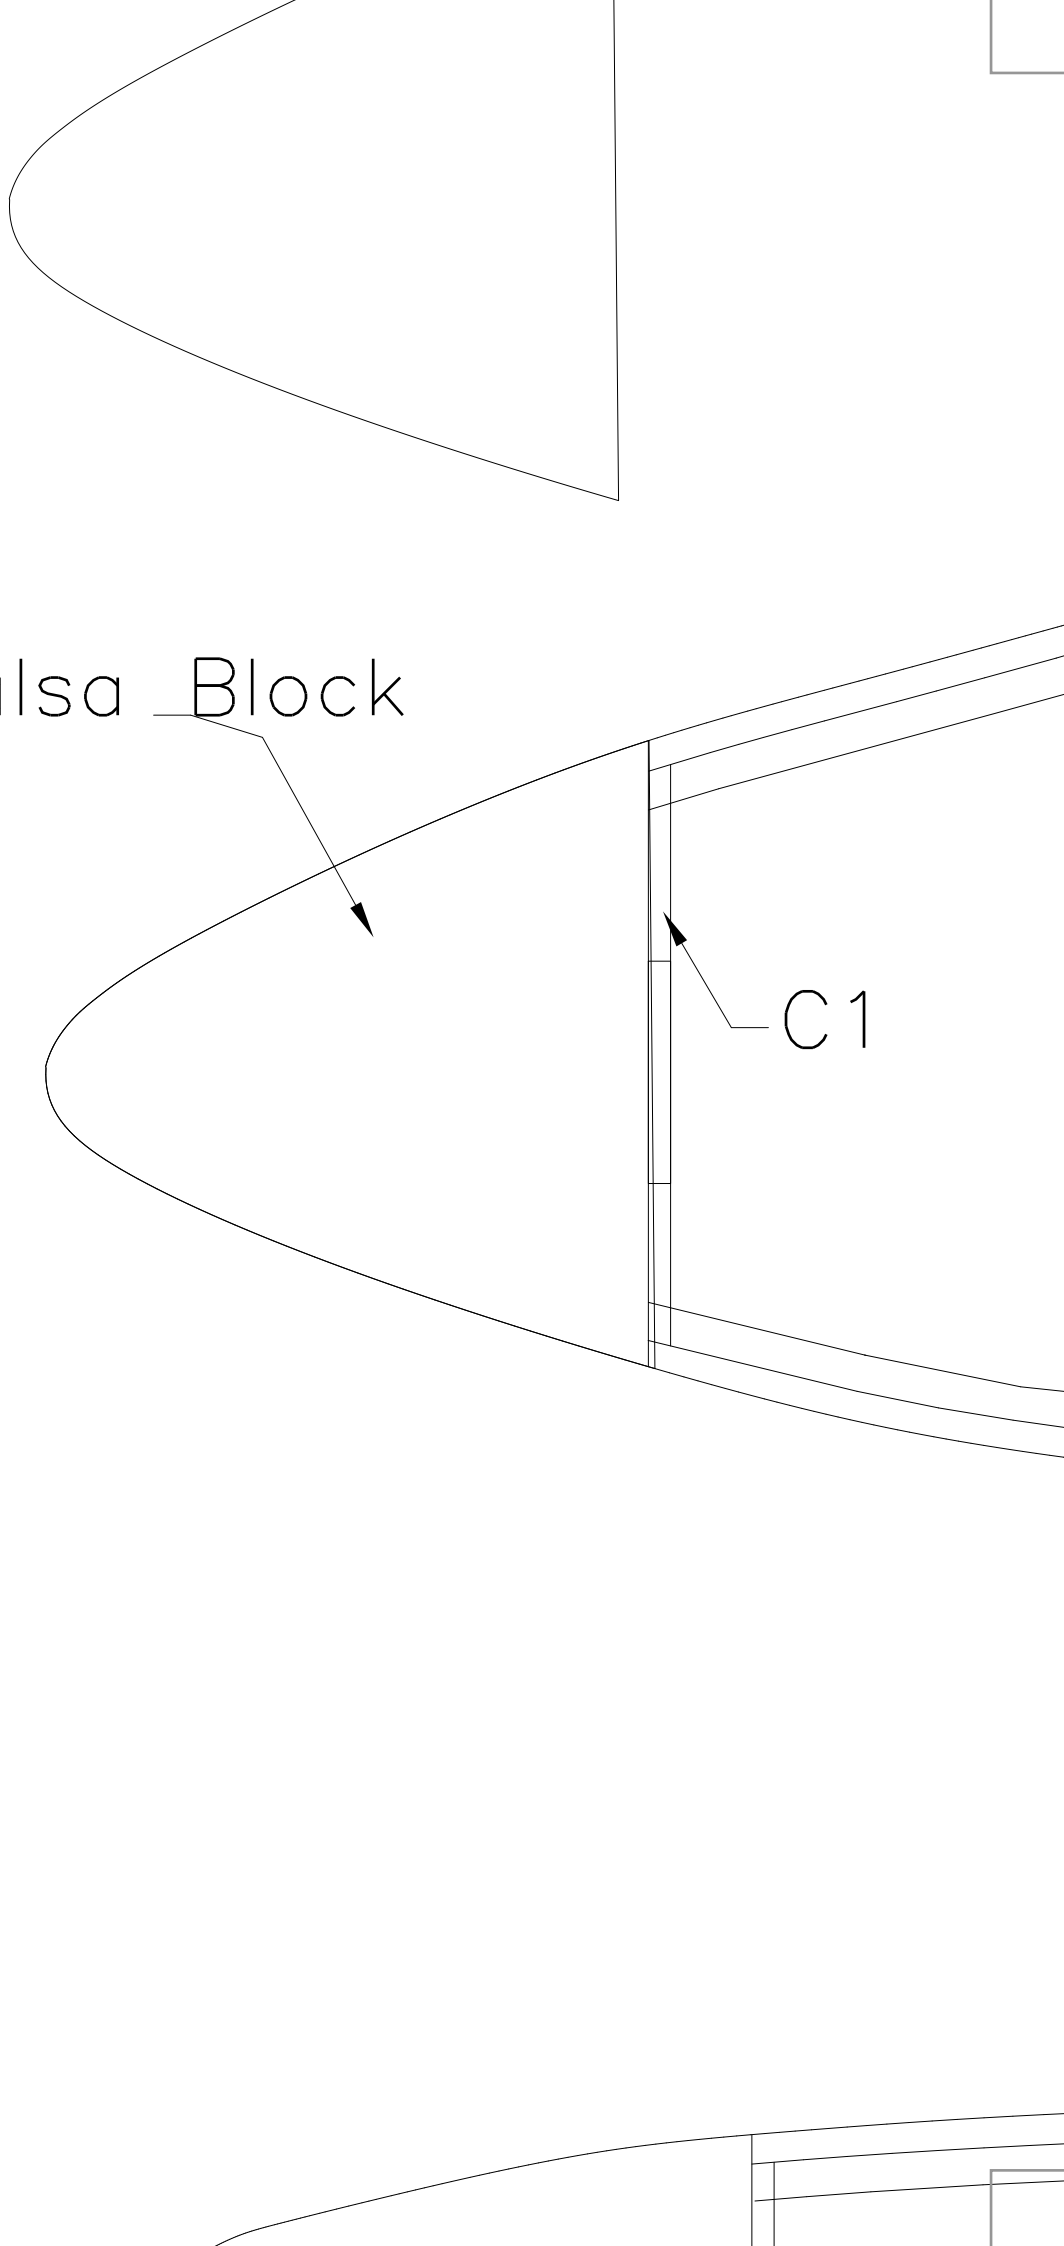

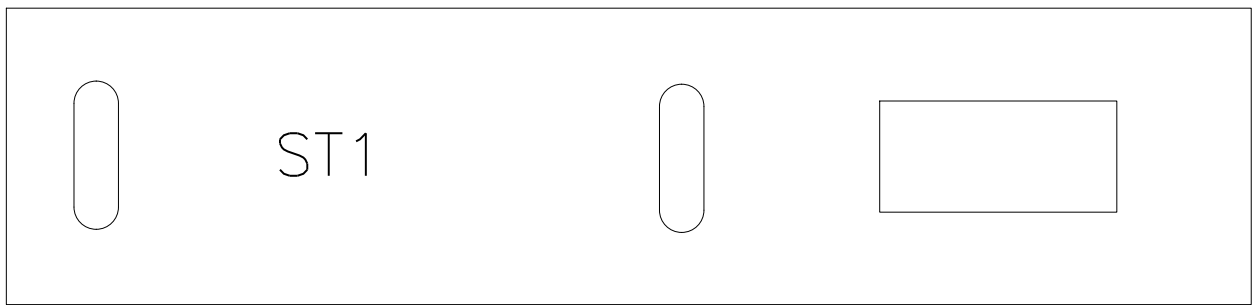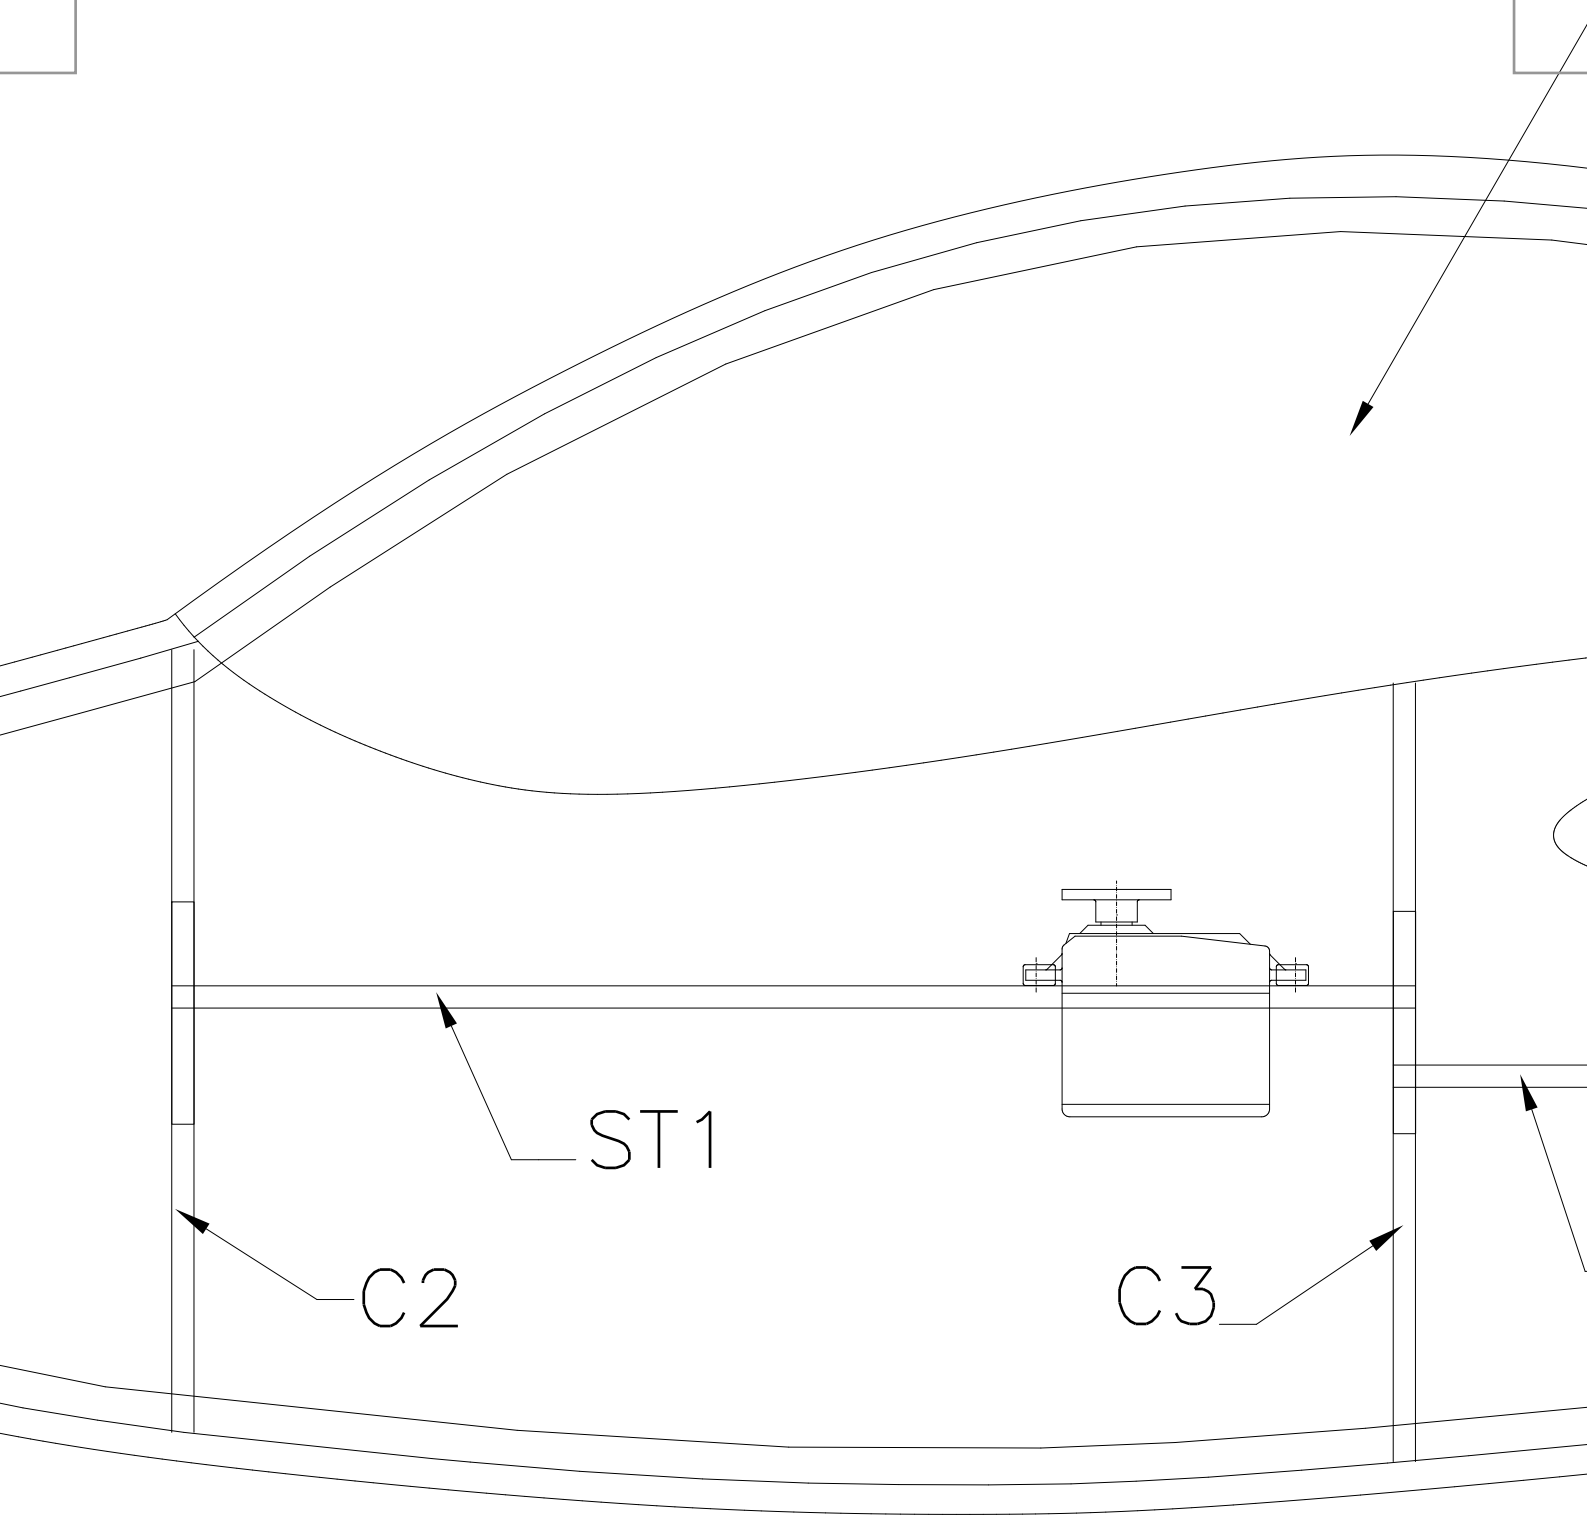

Fuselage servo tray -

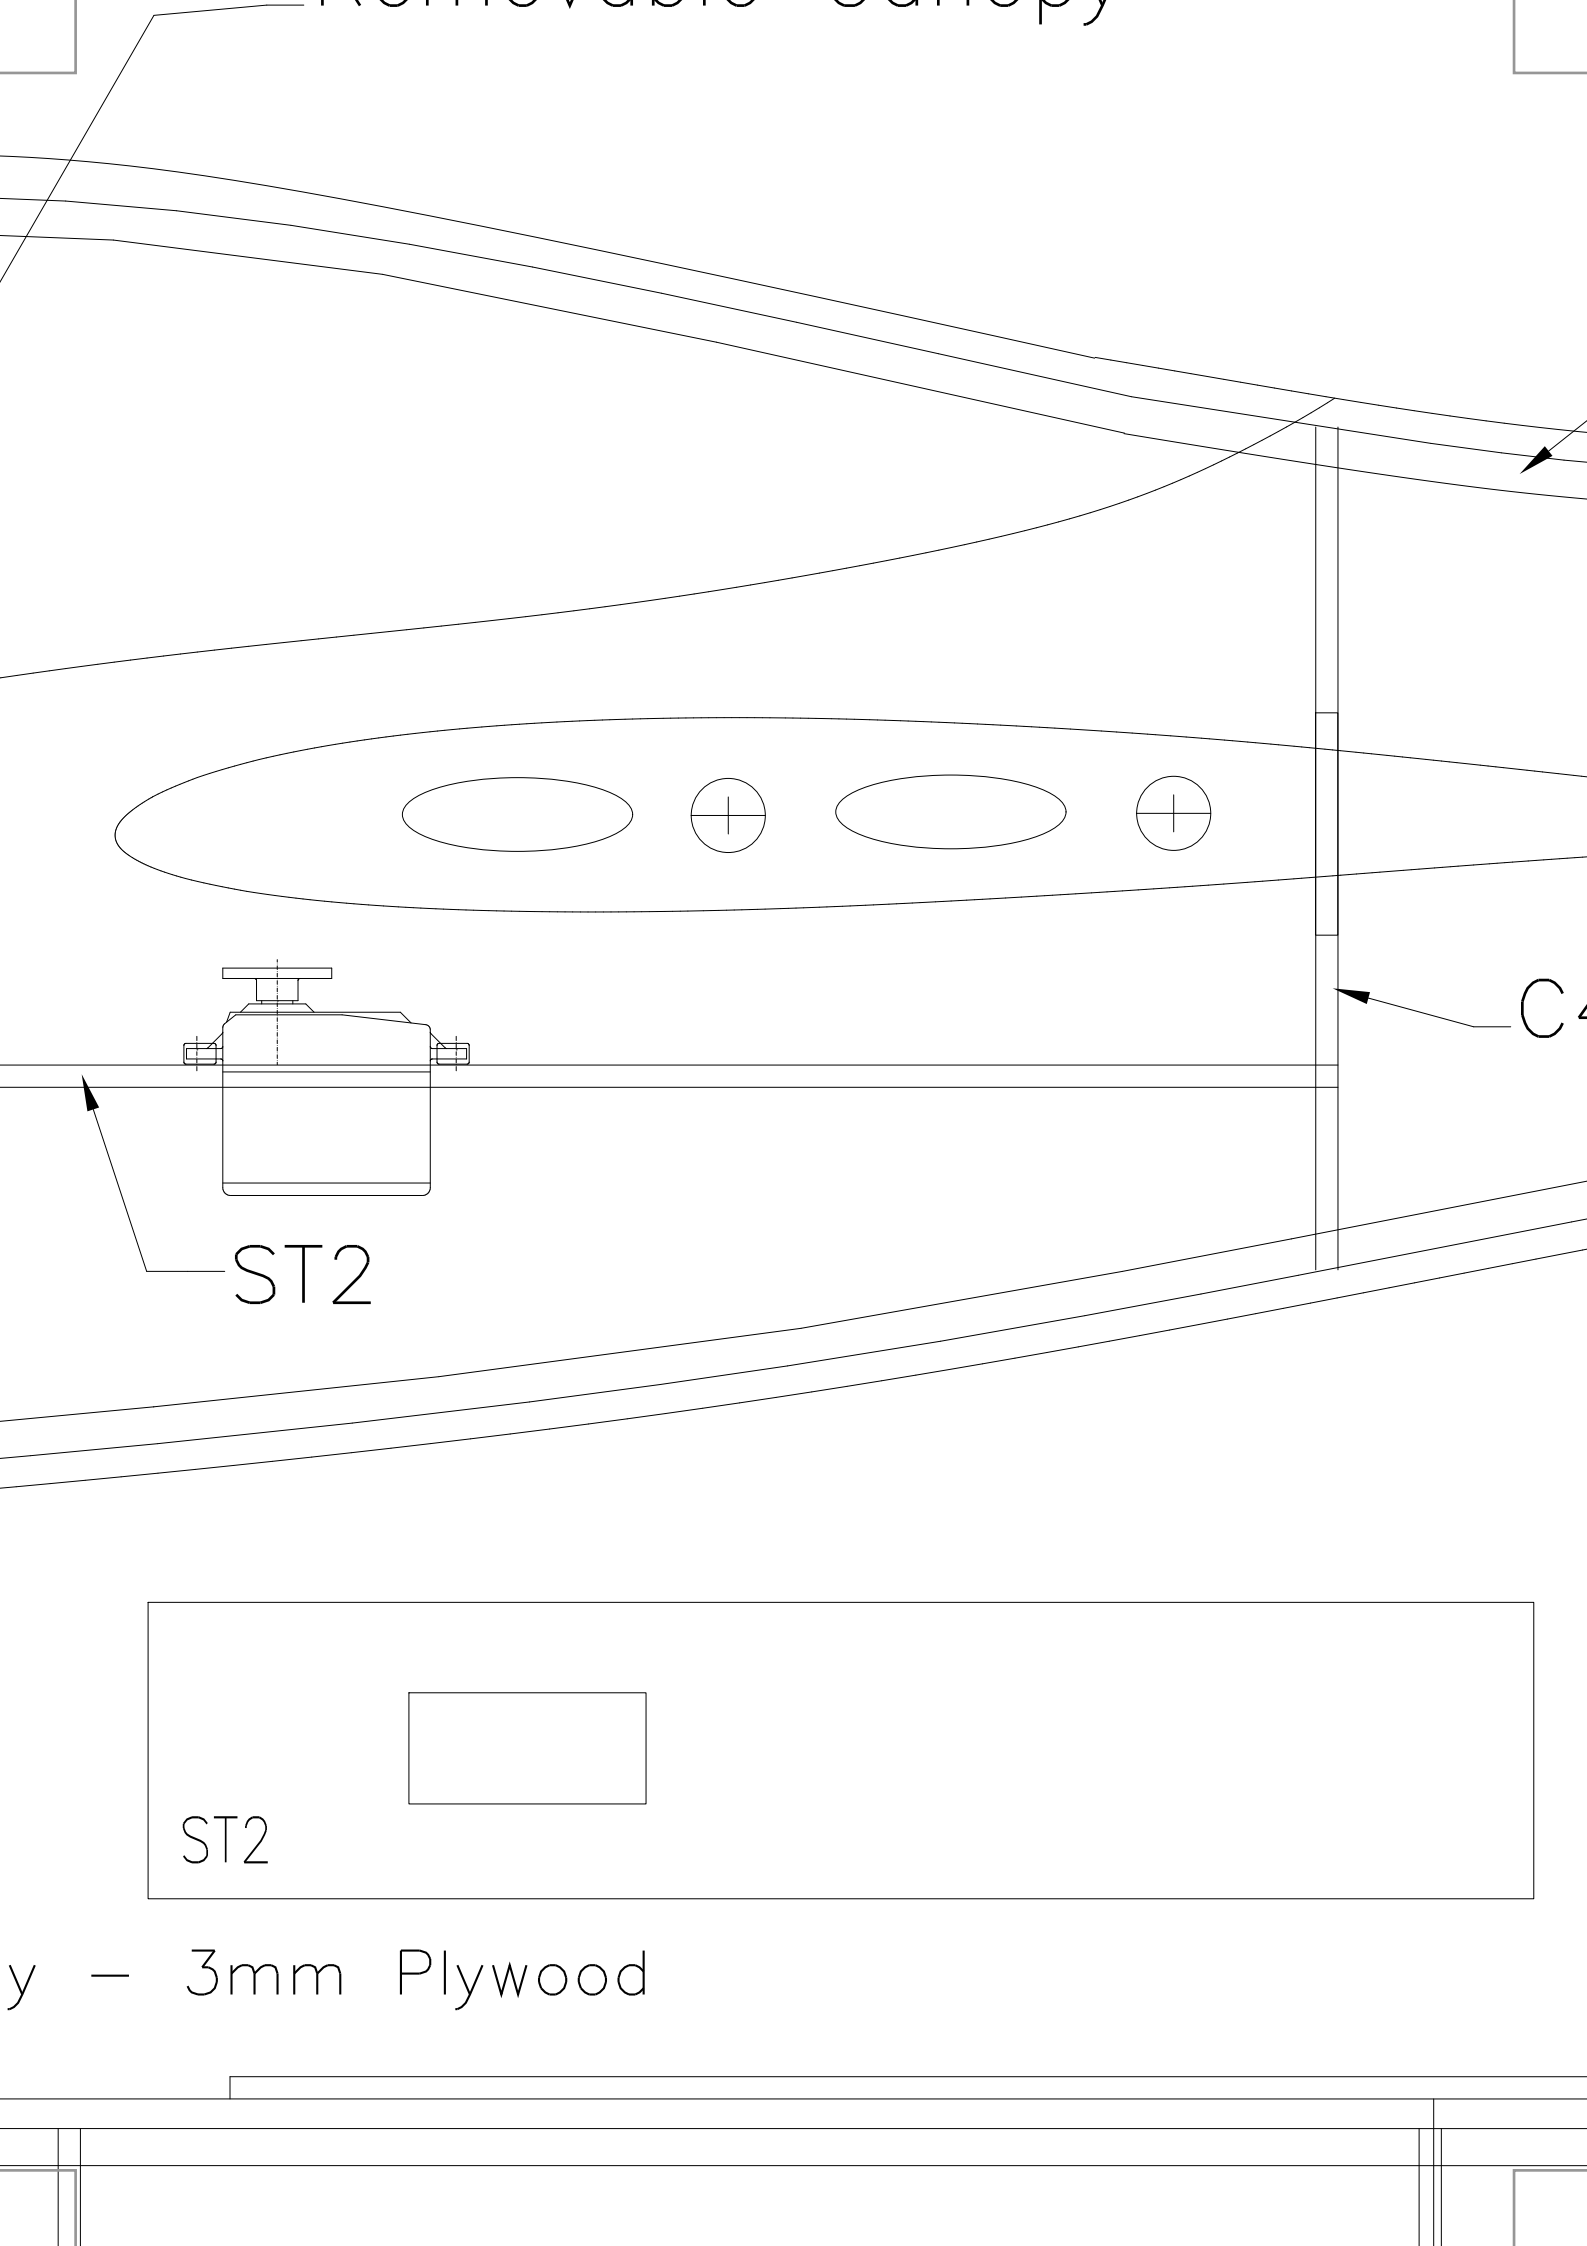

C1


Balsa Strips — 5x5mm

C4

C5

T2

3mm Balsa

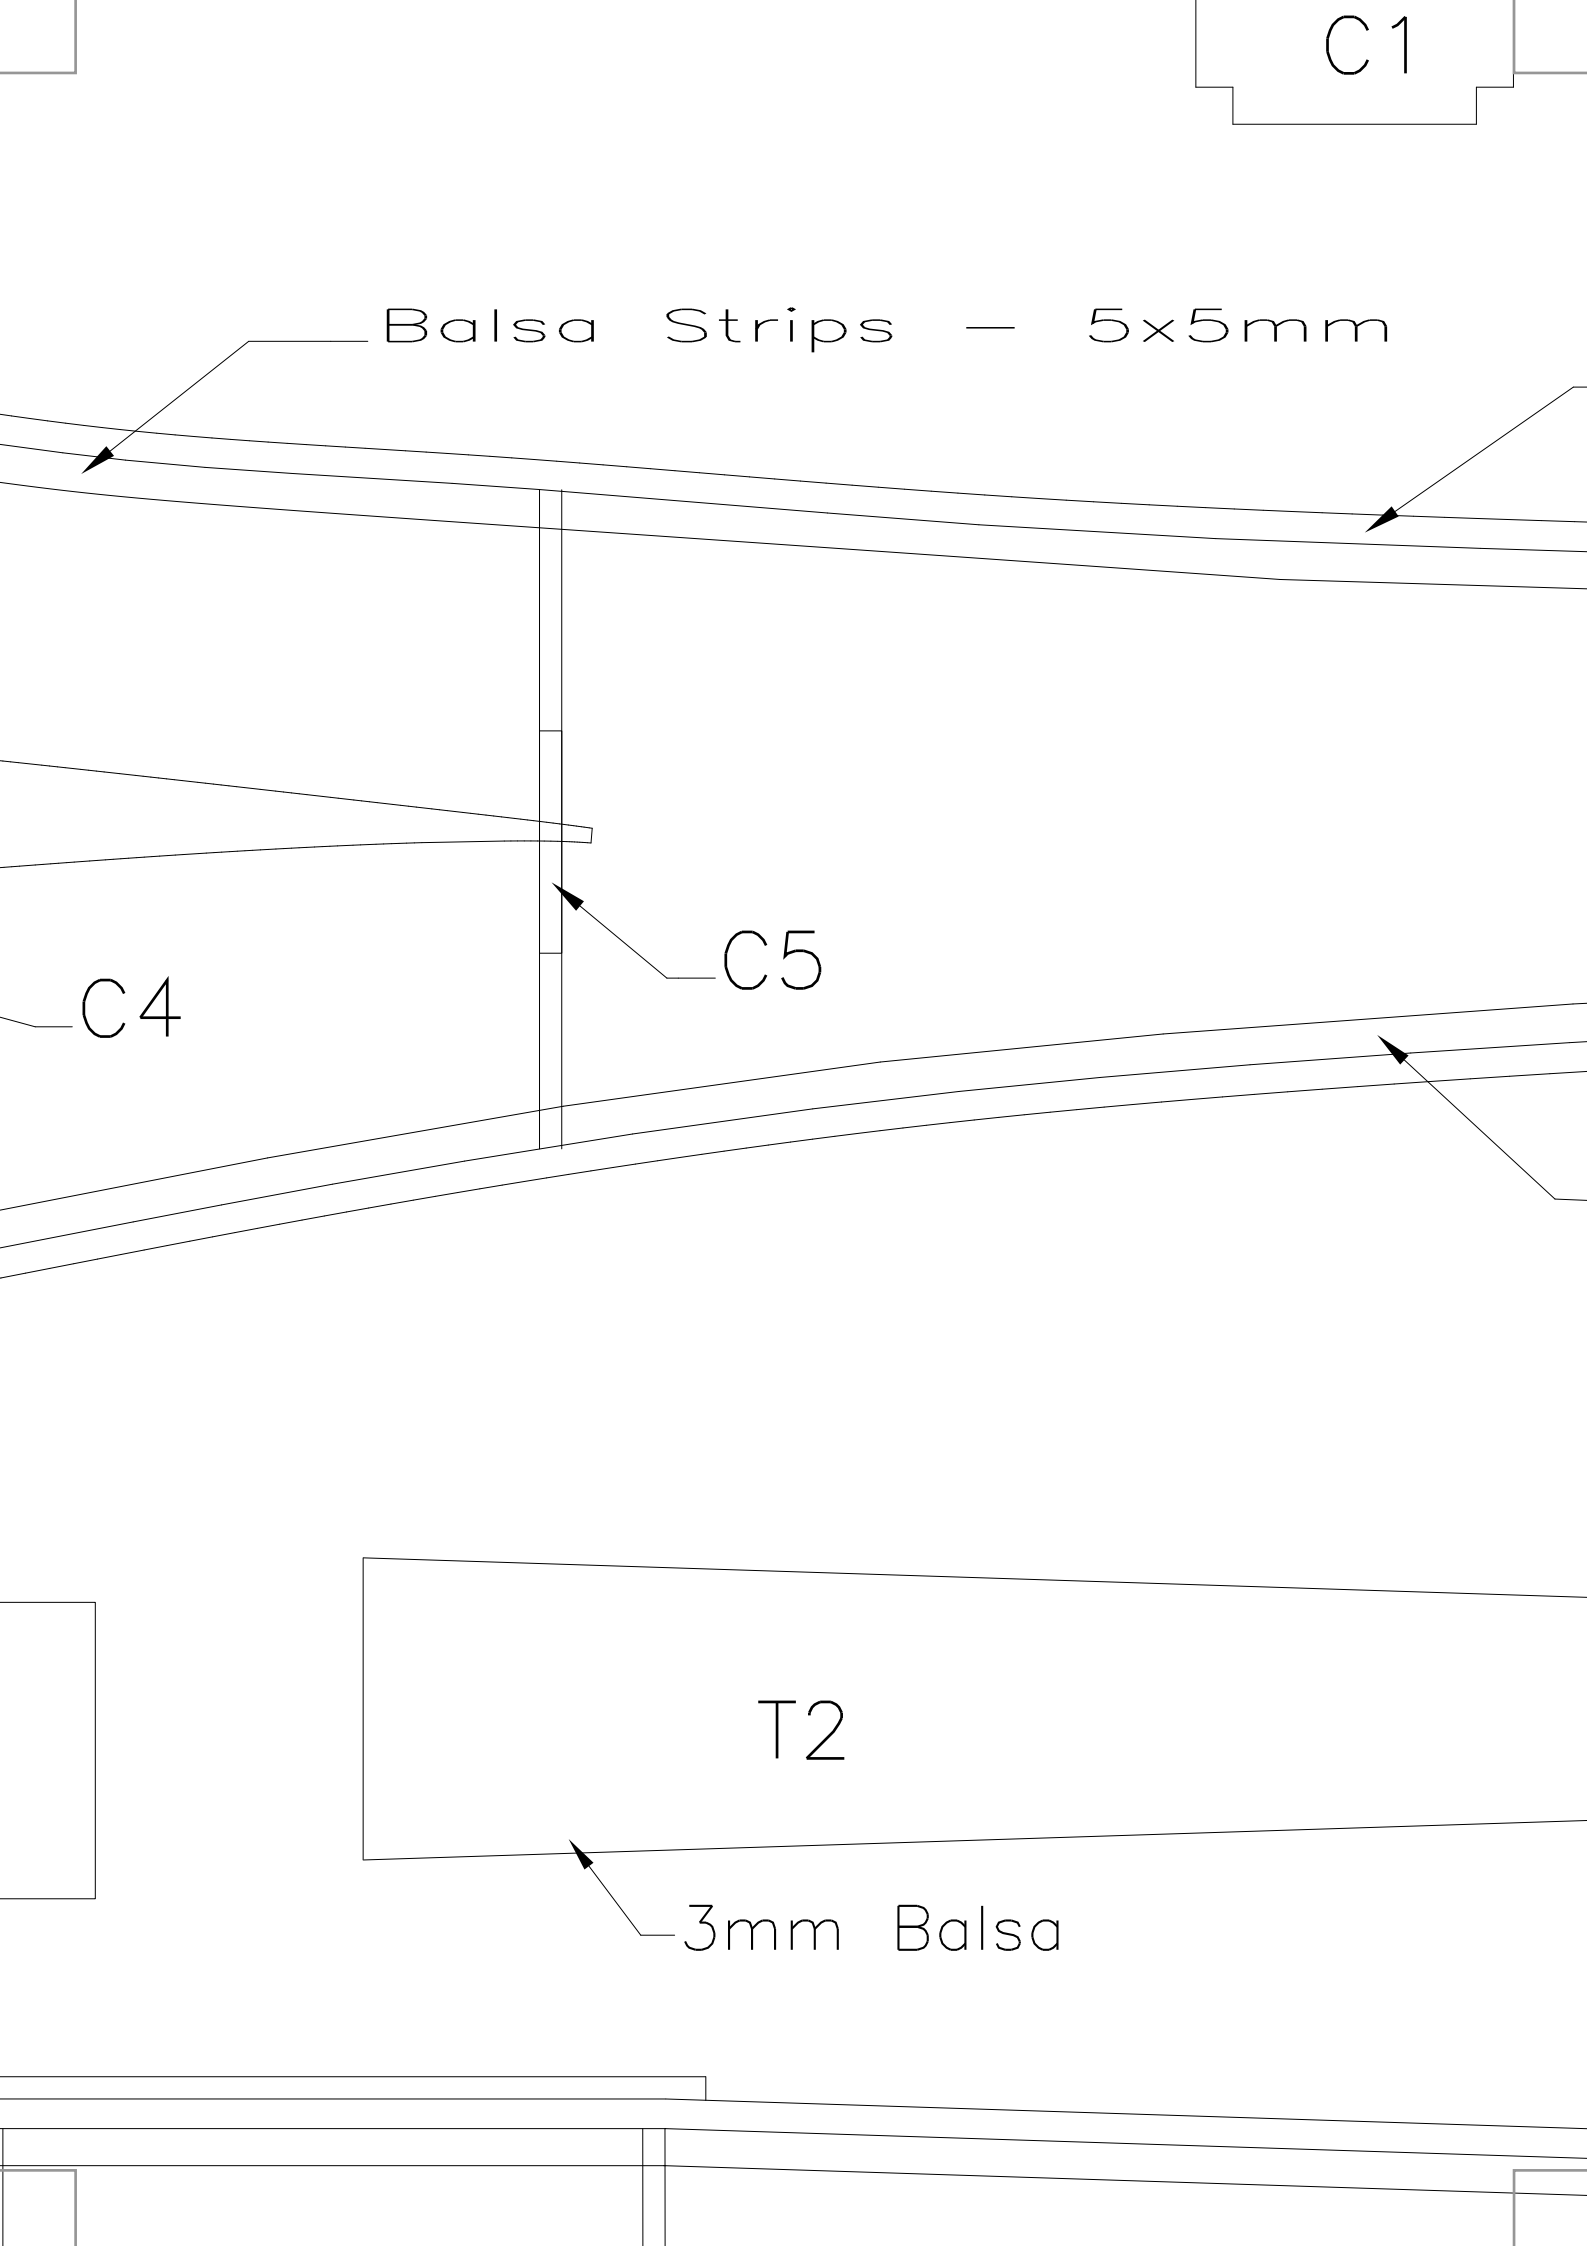




C4


Balsa 4mm

ALL formers in 3m


C6

Balsa Strips - 5x5mm



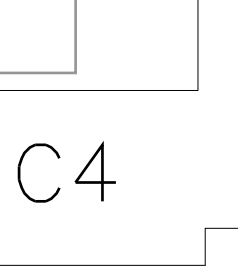


C4

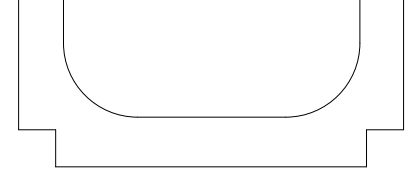


3mm Plywood



T1 - 3mm Plywood

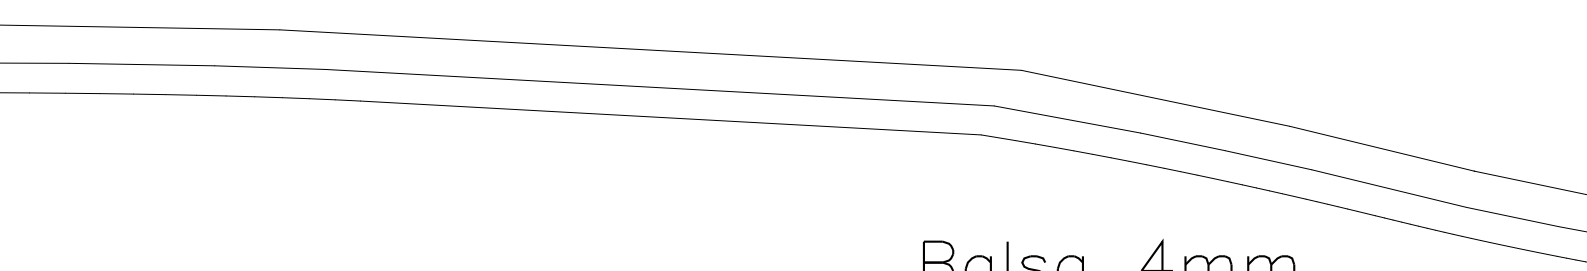


Balsa 4mm

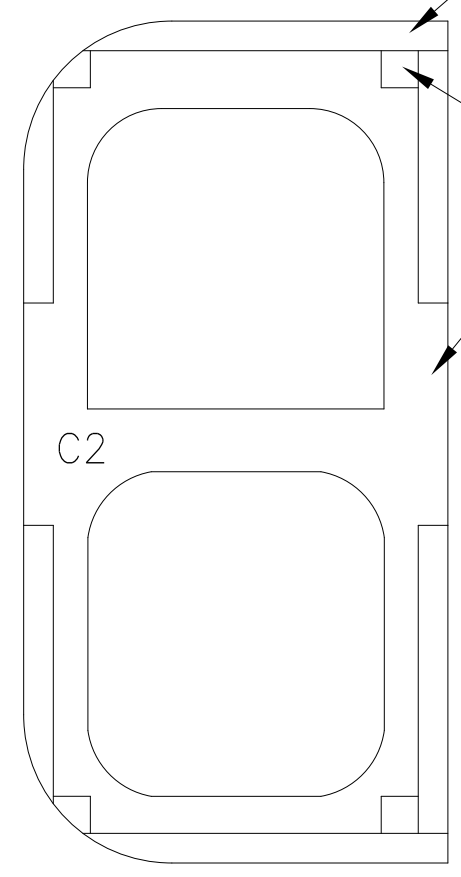


C2

5x5mm Balsa


Former

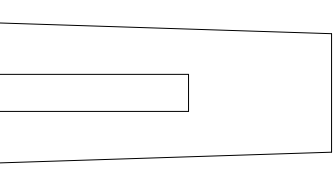


3mm Plywood

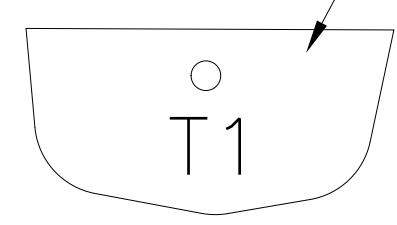


T1

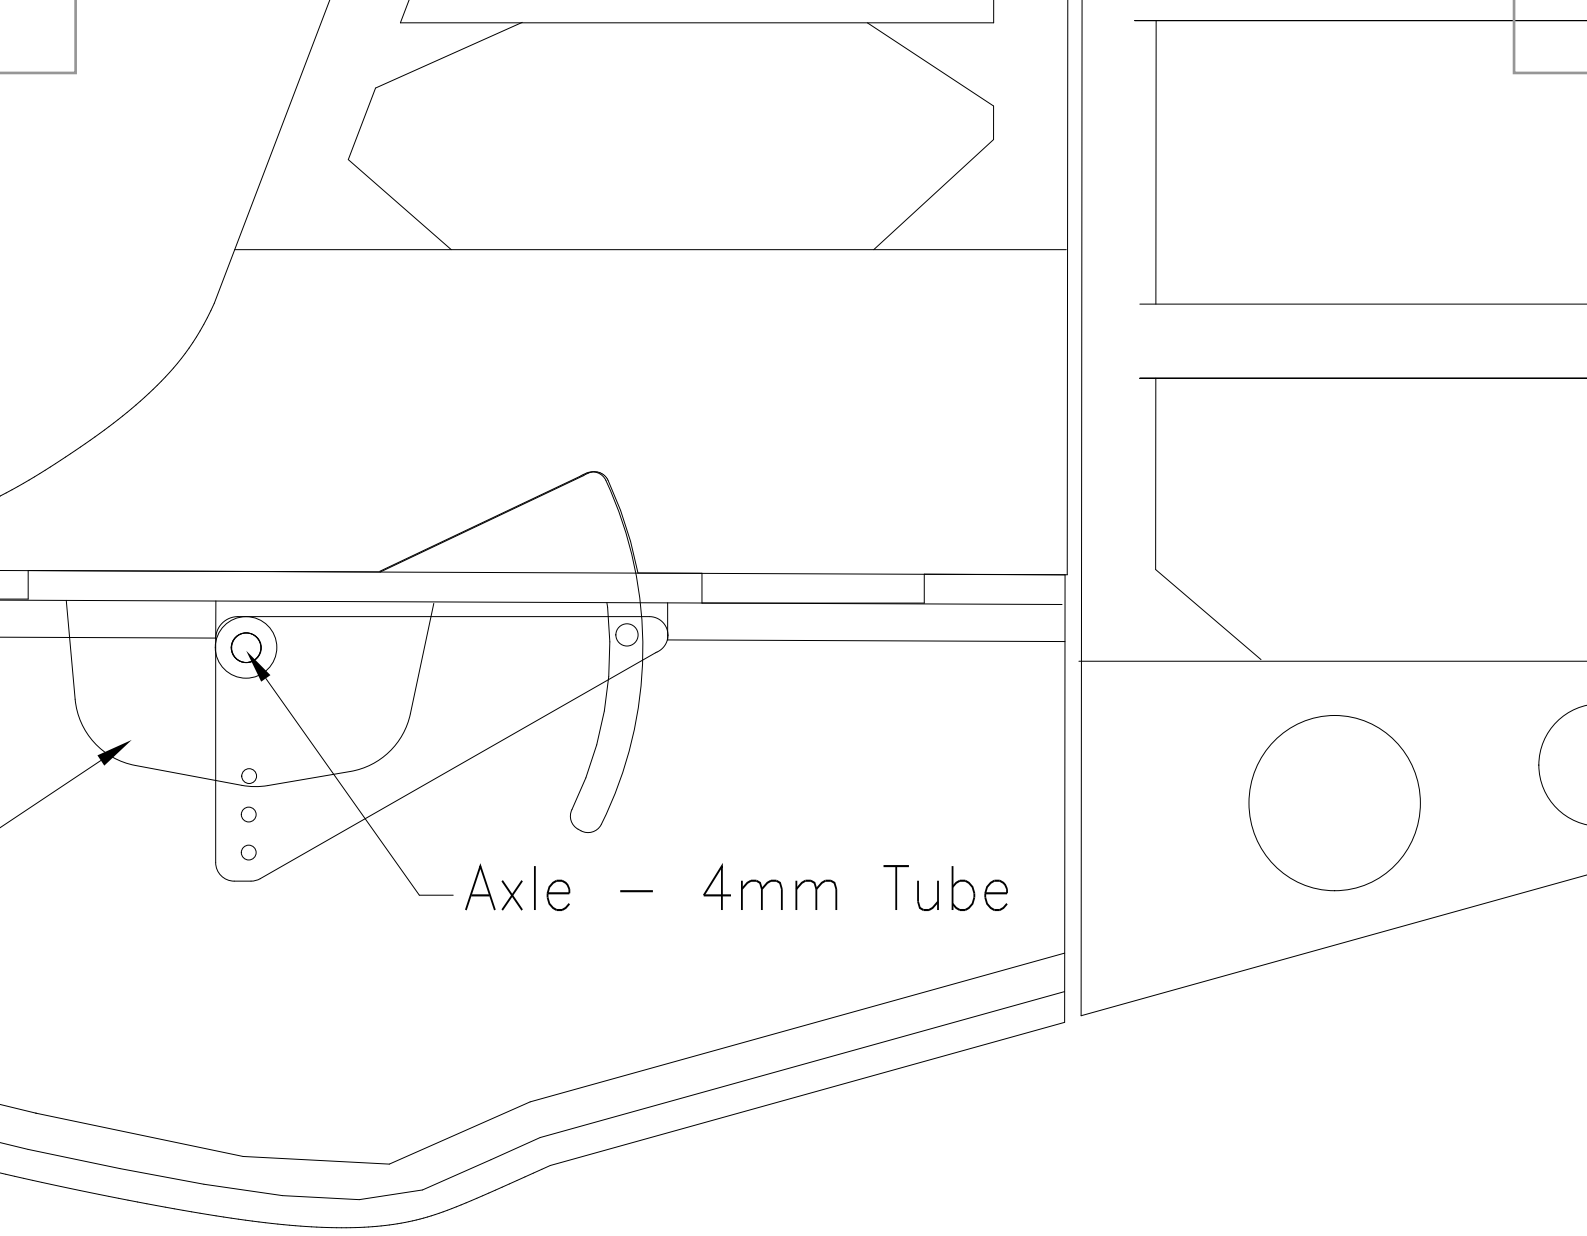

Axle - 4mm Tube

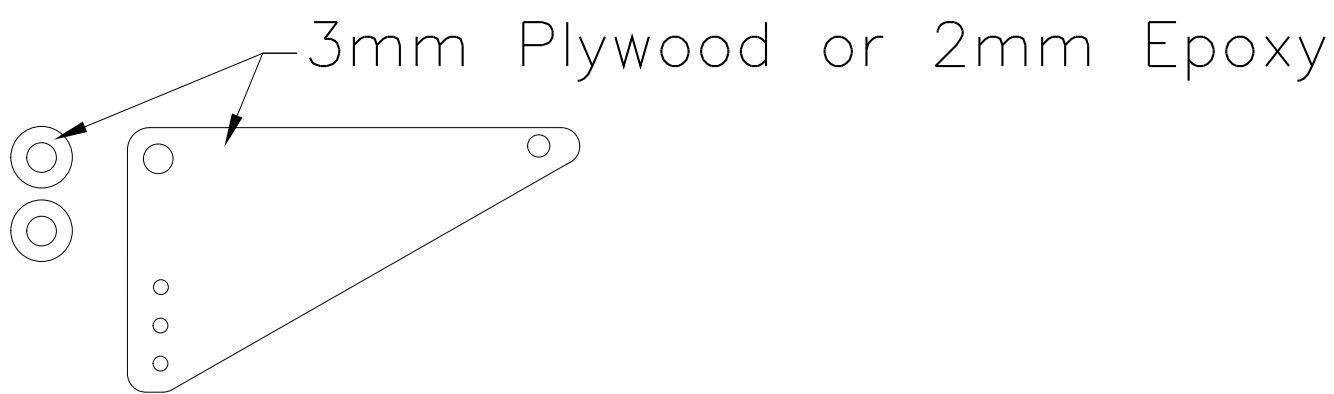


3mm Plywood or 2mm Epoxy

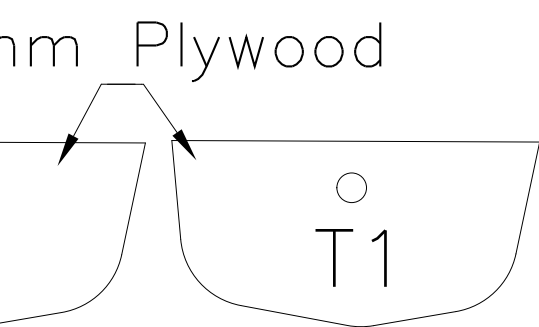


3mm Plywood

T1

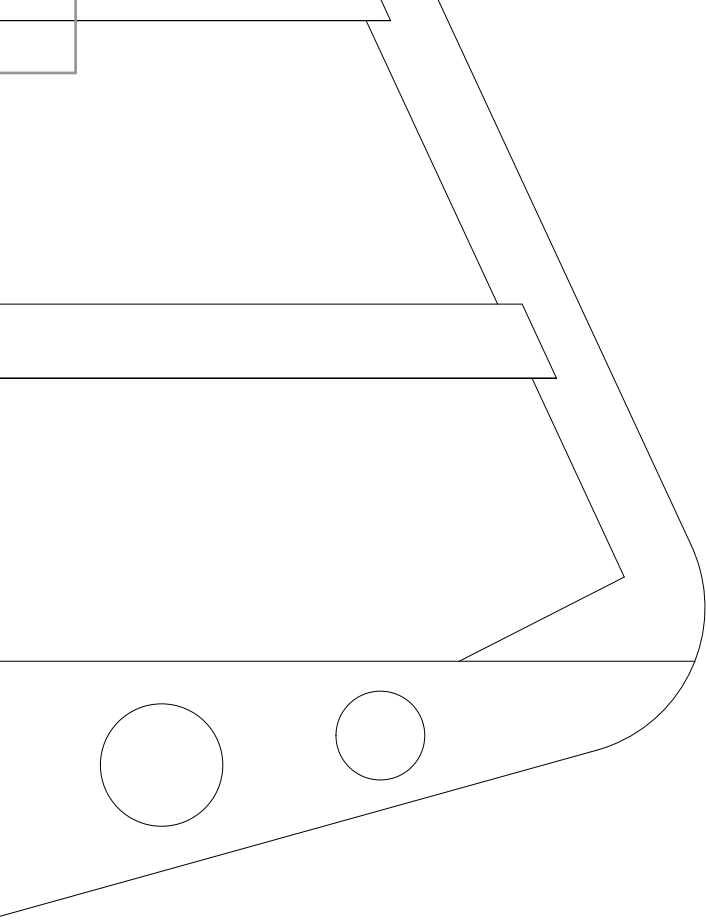

xy

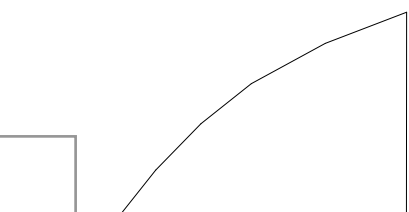

QUAR


Aerobatic glider


K]b[gdUb. ' &a

@Yb[\h ' %"(a




K]b['dfcZ]`Y. 'G6- *J '!G6- *J G



fMŁ: fYX 'A Uf]Y '#; `]XYf=fY`UbX"bYh!'Bc 'fYdfcXi Wh]cb'k]h\c

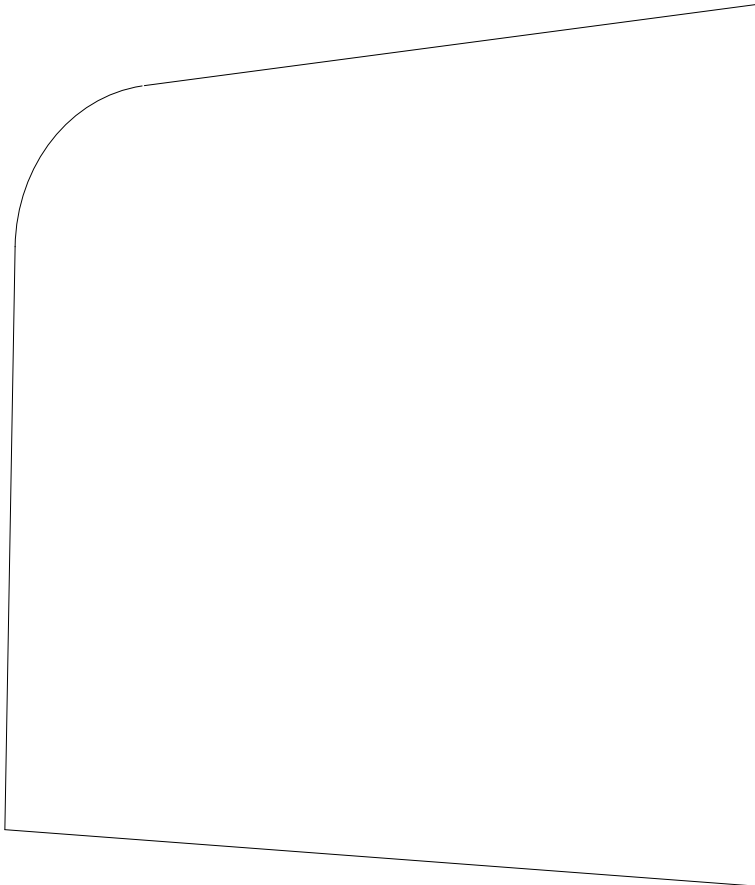



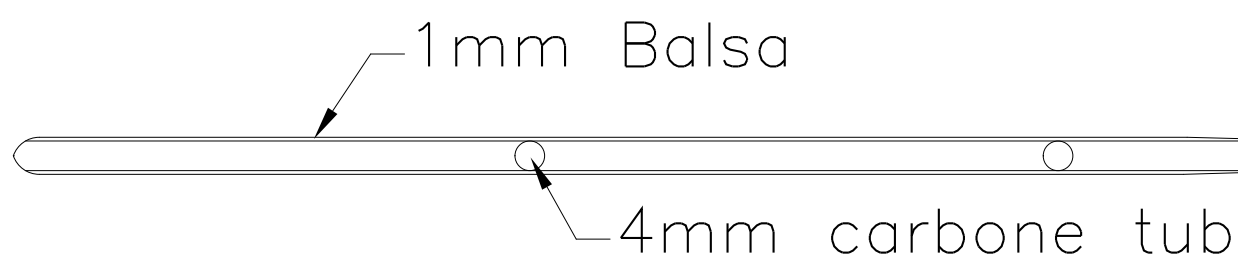



Removable Canopy

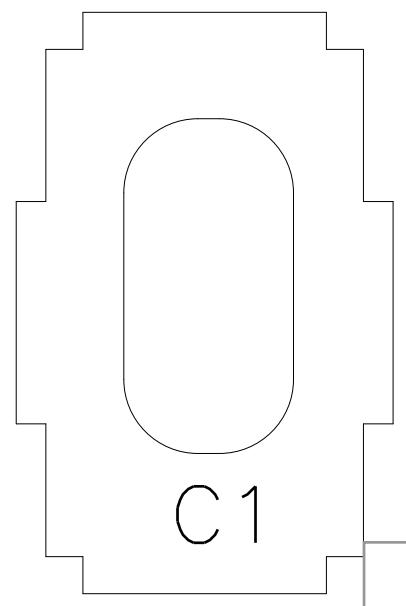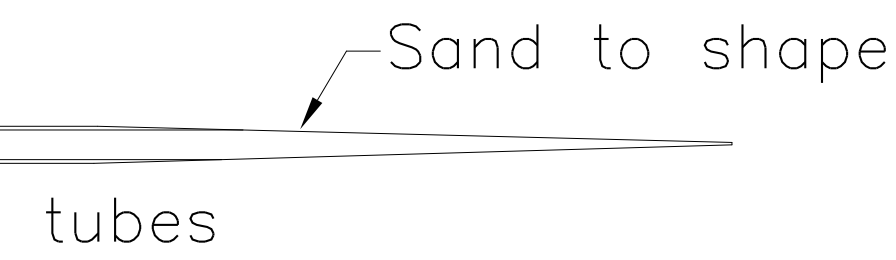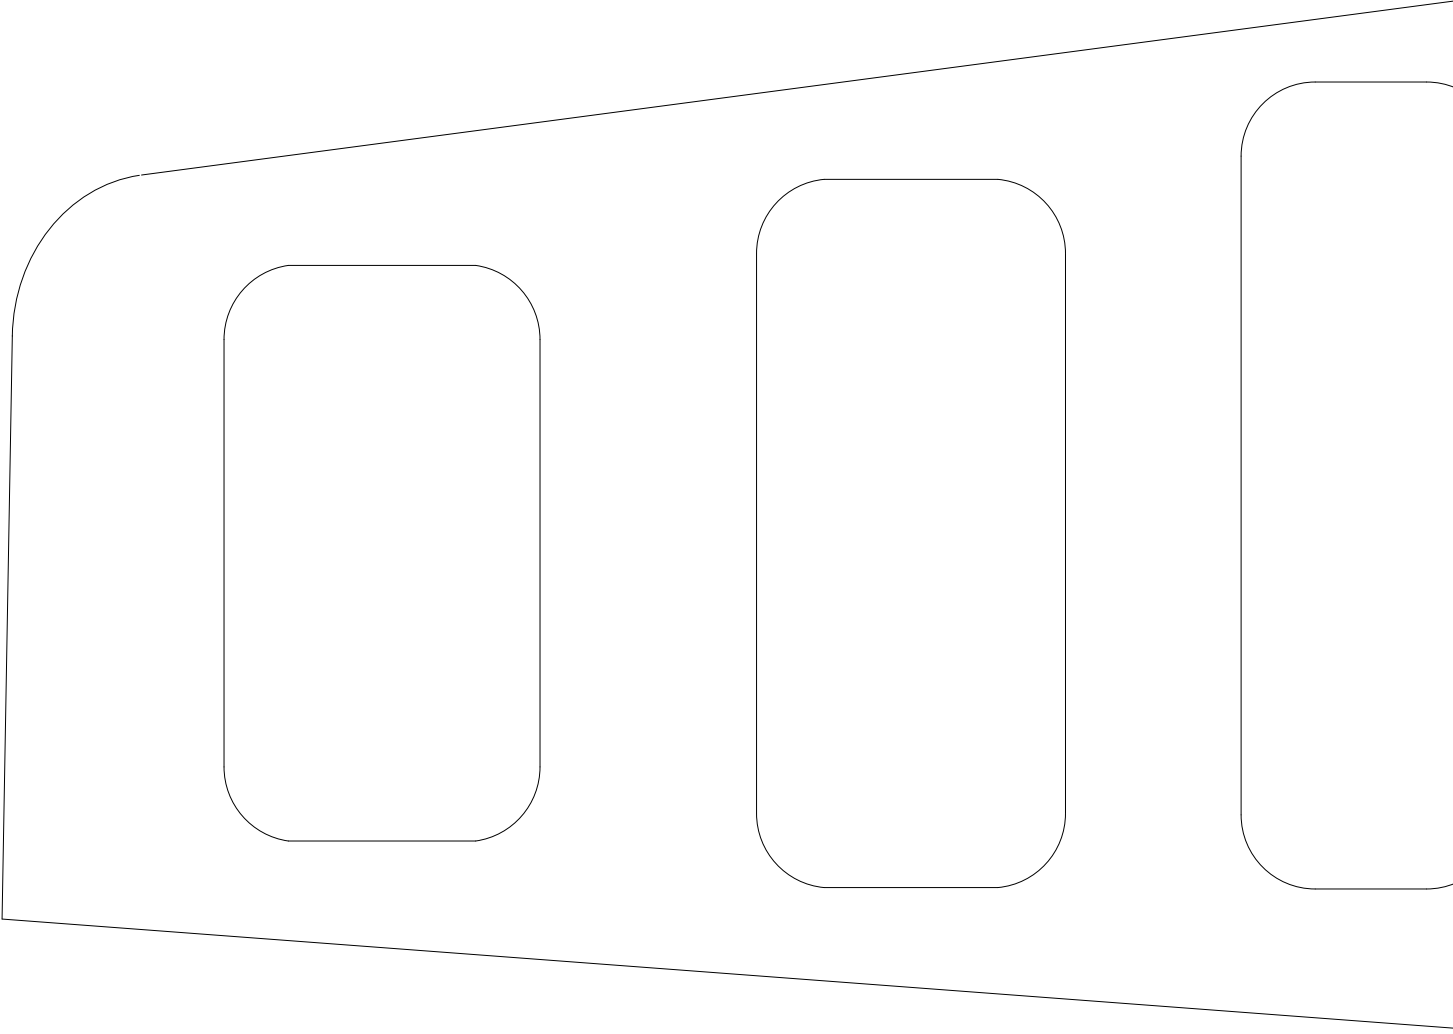

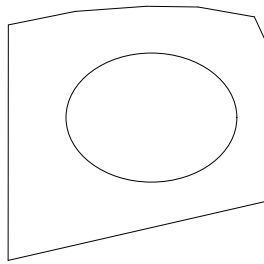


ALL rudd

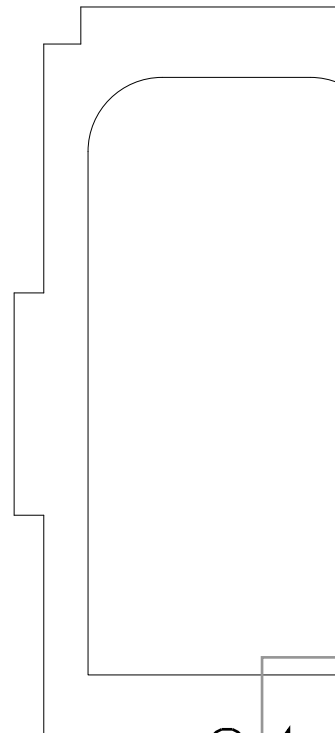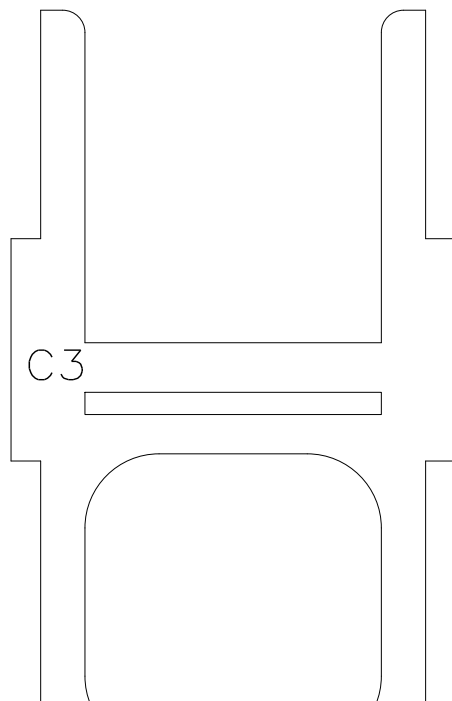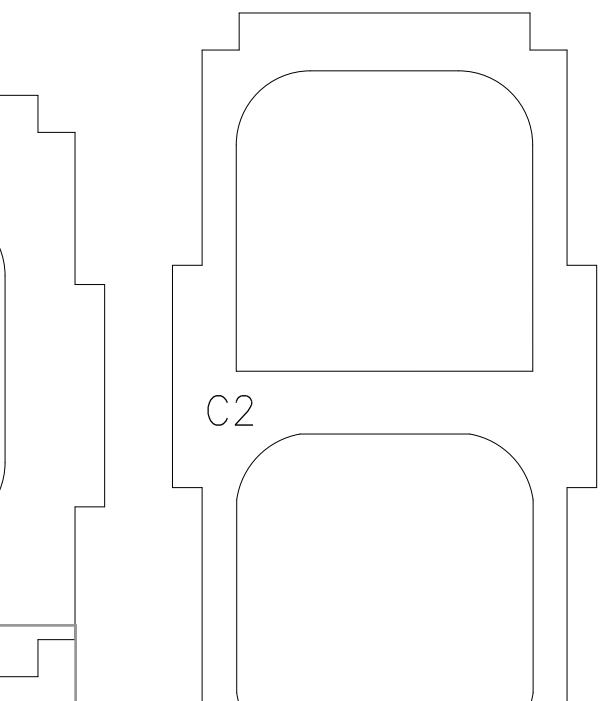

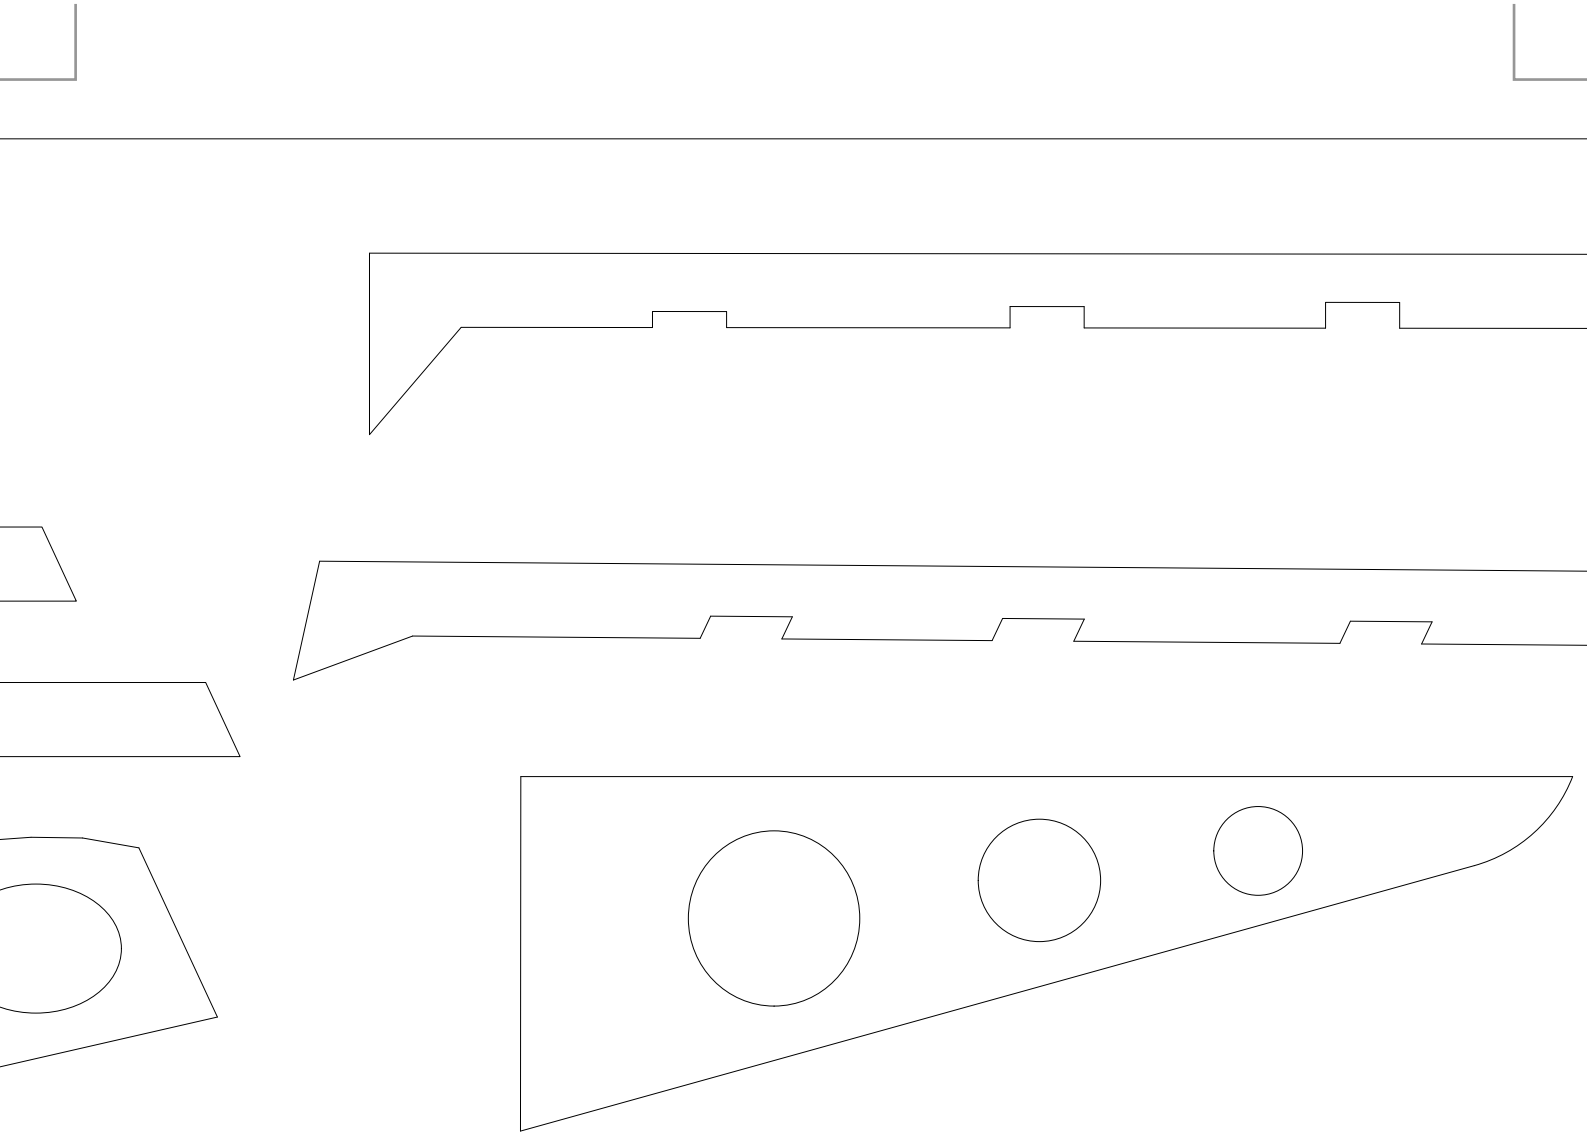

rudder parts in 5mm Balsa

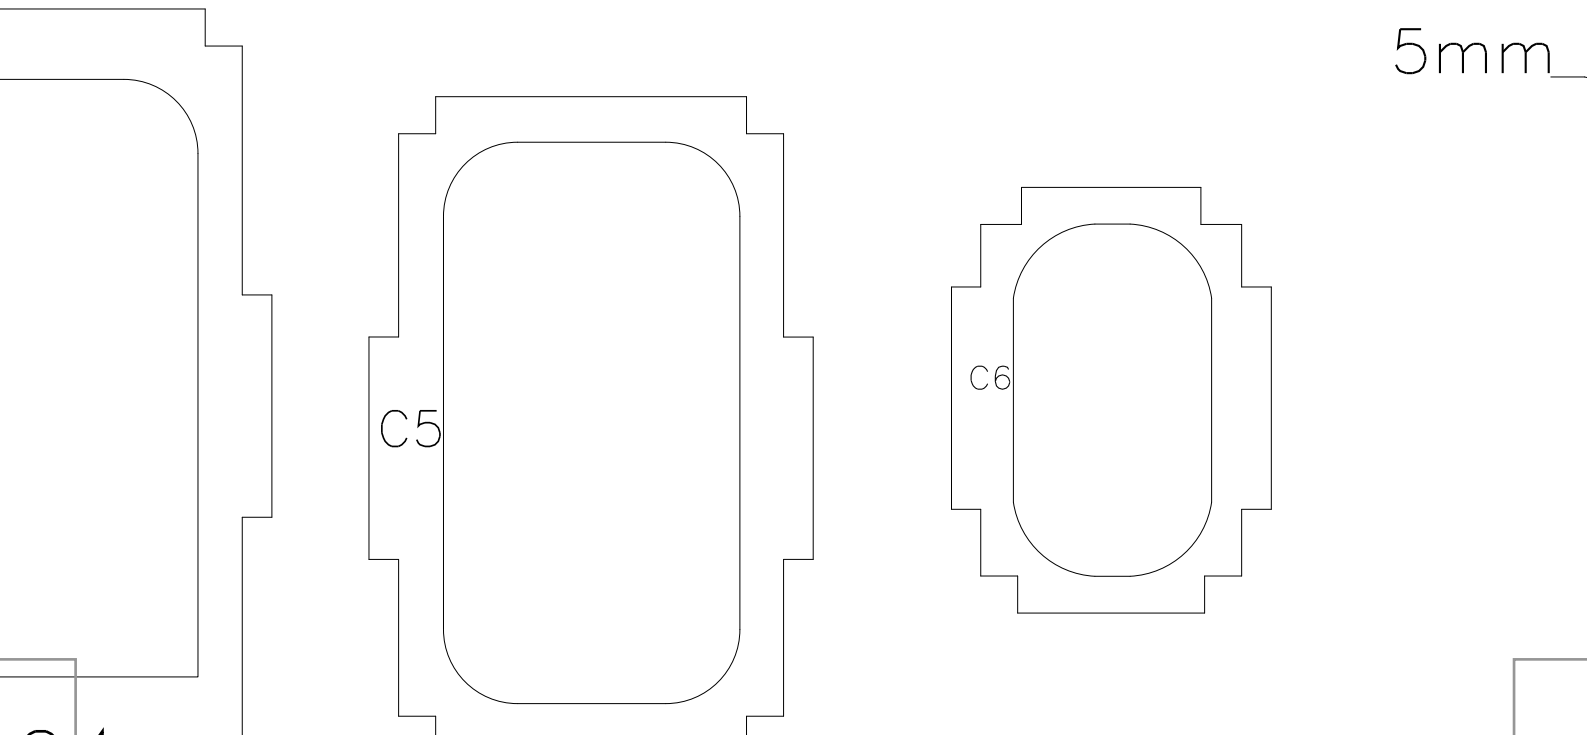

mm_Balsa

